Clack 5 Button Step-by-Step Programing Guide for:

SULFUR/IRON FILTERS

Connect valve to outlet, verify you have the desired valve.

It will turn on to this screen.

Press NEXT and UP and hold until the screen changes.







Set **Regeneration Day** to 1

Press NEXT

Set **Regeneration Time** to 12:00AM



After you confirm the two settings. Pres and Hold NEXT and DOWN to access the deeper programming. 1.Set **Filtration** to IRON

Press NEXT

2. Set **Backwash** to 15 min

Press Next







Set Rinse to 10 min

Press NEXT

Set Brine, dN to 60 min



THE FOLLOWING STEP IS ONLY IF THE SYSTEM IS TO BE USED WITH AN OZONE INJECTOR:

Turn Relay ON:

Take off cover and need to connect to terminals. Each side of the two wires. Press top button to turn relay on.



Clack 5 Button Step-by-Step Programing Guide for:

SOFTENERS

It will turn on to this screen.

Press NEXT and UP and hold until the screen changes.



Set Regeneration
Day to 2-4
Press NEXT

Set Regeneration
Time to 2:00AM




After you confirm the two settings. Pres and Hold NEXT and DOWN to access the deeper programming.

1.Set **Filtration** to SOFTENING DOWN POST FIL

Press NEXT

2. Set **1-Backwash** to 8 min

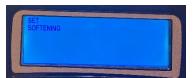





3. Set 2-BRINE (AIR DRAW) to 60min



4. Set **3-Backwash** to 8 min



5. Set **4-Rinse** to 8 min



SET 5 IZ.II

SET CAPACITY *1000

Set **Grains of CAPACITY** to:

9x48= 24

SET
REGEN FIII GAL

SET Reg

Gallons Capacity: AUTO

NEXT

SET Immediate Regeneration (NORMAL) 6. Set Salt **5-FILL** to:

9x48 = 9.5

10x54= 12





Clack 5 Button Step-by-Step Programing Guide for:

BACKWASH ONLY FILTERS

It will turn on to this screen. Press NEXT and UP and hold until the screen changes.





Set **Regeneration**Day to 7

Press NEXT

Set **Regeneration Time** to 2:00AM





After you confirm the two settings. Pres and Hold NEXT and DOWN to access the deeper programming.





2. Set **1-Backwash** to 10 min







3. Set **2-BRINE (AIR DRAW)** to OFF



4. Set **3-Backwash** to OFF



5. Set **4-Rinse** to 8 min



6. Set Salt **5-FILL** to: OFF

Press NEXT



Gallons Capacity will be off.

*ONLY METERED would need the gallonage set to what the customer wants

RELAY off









